

**PocketWizard & Sekonic Compatibility**

L-478DR/L-478DR-U L-858D + RT-20PW for FCC (US) and IC (Canada)				Triggering	Power Control	Power Control Level	Power Control Step	HyperSync	HSS	Modeling lamp on/off	Modeling lamp Individual ON/OFF	Modeling lamp power control	FCC & Canada IC (344MHz)											
													Standard (Legacy) System			ControlTL			E-release *2					
													Availability	Channel	Zone *1	Availability	Channel	Zone	E Channel			Camera LR (Long Range)		
						Availability	Channel	Zone	Availability	Channel	Zone	Availability	Channel	Zone										
Plus	Discontinued	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	4	1	NA	NA	NA	NA	NA	NA	NA	NA	NA
Plus II	Discontinued	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	4	1	NA	NA	NA	NA	NA	NA	NA	NA	NA
Plus III	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	NA	NA	NA	Yes	32	4 (A, B, C, D)	Yes	80	4 (A, B, C, D)
Plus IV	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	NA	NA	NA	Yes	32	4 (A, B, C, D)	Yes	80	4 (A, B, C, D)
Plus X	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	10	1	NA	NA	NA	NA	NA	NA	NA	NA	NA
MultiMAX	Discontinued	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	NA	NA	NA	NA	NA	NA	NA	NA	NA
MultiMAX II	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	Yes	20	4 (A, B, C, D)	NA	NA	NA	NA	NA	NA
Flex TT5 (Nikon)	Current	Transceiver	Nikon Speedlite	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	NA	NA	NA	Yes (Switchable by Utility)	32	3 (A, B, C)	Yes (Switchable by Utility)	20	3 (A, B, C)	Yes	32	4 (A, B, C)	PENDING	80	3 (A, B, C)
Flex TT6 (Canon)	Current	Transceiver	Canon Speedlite	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	NA	NA	NA	Yes (Switchable by Utility)	32	3 (A, B, C)	Yes (Switchable by Utility)	20	3 (A, B, C)	PENDING	32	3 (A, B, C)	PENDING	80	3 (A, B, C)
Power MC2	Current	Receiver	Einstein E640	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	Yes	Yes	NA	Yes	32	3 (A, B, C)	Yes	20	3 (A, B, C)	Yes	32	3 (A, B, C)	NA	NA	NA
Power ST4	Current	Receiver	Elinchro RX series	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	Yes	Yes	NA	Yes	32	3 (A, B, C)	Yes	20	3 (A, B, C)	PENDING	32	3 (A, B, C)	NA	NA	NA

\*1 --- Zone (A to D) is available for Standard (Legacy) System for channel 17 to 32.  
 \*2 --- E-release is new system, and upgradable via USB & payment  
 \*3 --- Can only fire all 4 Zones at once

L-478DR L-858D + RT-3PW for CE (Europe) and China				Triggering	Power Control	Power Control Level	Power Control Step	HyperSync	HSS	Modeling lamp on/off	Modeling lamp Individual ON/OFF	Modeling lamp power control	CE (433MHz)											
													Standard (Legacy) System			ControlTL			E-release *2					
													Availability	Channel	Zone *1	Availability	Channel	Zone	E Channel			Camera LR (Long Range)		
						Availability	Channel	Zone	Availability	Channel	Zone	Availability	Channel	Zone										
Plus	Discontinued	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	4	1	NA	NA	NA	NA	NA	NA	NA	NA	NA
Plus II	Discontinued	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	4	1	NA	NA	NA	NA	NA	NA	NA	NA	NA
Plus III	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	NA	NA	NA	Yes	32	4 (A, B, C, D)	Yes	80	4 (A, B, C, D)
Plus IV	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	NA	NA	NA	Yes	32	4 (A, B, C, D)	Yes	80	4 (A, B, C, D)
Plus X	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	10	1	NA	NA	NA	NA	NA	NA	NA	NA	NA
MultiMAX	Discontinued	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	NA	NA	NA	NA	NA	NA	NA	NA	NA
MultiMAX II	Current	Transceiver	All flash units	Yes	NA	NA	NA	NA	NA	NA	NA	NA	Yes	32	4 (A, B, C, D)	Yes	20	4 (A, B, C, D)	NA	NA	NA	NA	NA	NA
Flex TT5 (Nikon)	Current	Transceiver	Nikon Speedlite	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	NA	NA	NA	Yes (Switchable by Utility)	32	3 (A, B, C)	Yes (Switchable by Utility)	3	3 (A, B, C)	Yes	32	3 (A, B, C)	PENDING	80	3 (A, B, C)
Flex TT6 (Canon)	Current	Transceiver	Canon Speedlite	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	NA	NA	NA	Yes (Switchable by Utility)	32	3 (A, B, C)	Yes (Switchable by Utility)	3	3 (A, B, C)	PENDING	32	3 (A, B, C)	PENDING	80	3 (A, B, C)
Power MC2	Current	Receiver	Einstein E640	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	Yes	Yes	NA	Yes	32	3 (A, B, C)	Yes	3	3 (A, B, C)	YES	32	3(A, B, C)	NA	NA	NA
Power ST4	Current	Receiver	Elinchro RX series	Yes	Yes	-3 to +3 stop	in 1/3 stop	NA	NA	Yes	Yes	NA	Yes	32	3 (A, B, C)	Yes	3	3 (A, B, C)	PLANNED	32	3(A, B, C)	NA	NA	NA

\*1 --- Zone (A to D) is available for Standard (Legacy) System for channel 17 to 32.  
 \*2 --- E-release is new system, and upgradable via USB & payment  
 \*3 --- Can only fire all 4 Zones at once

**When the customer use L-858D w/ RT-20PW or RT-3PW, there are some notes as follows.**

Please note that this compatibility table is between Sekonic light meter and receivers of each radio system. Some functions available between each radio system may NOT work with Sekonic light meters due to technical limitations.

Item	Contents
Mode of flash	* Canon speedlite should be set to normal - NOT Master or Slave * Nikon speedlite should be set to ON only - NOT Master or Remote.
Mode of transmitter on the camera	* Set your transmitter on the camera (for shooting) to "No Change, Triggering only" otherwise it overwrite the output power which is set with light meter.
L-858D and L-478DR series specification	*Even if the HSS mode is available on your flash units, L-858D or L-478DR series can not trigger HSS flash by radio.